


**EVelocity:**

# Controller Wiring Diagram (for Black Motor)

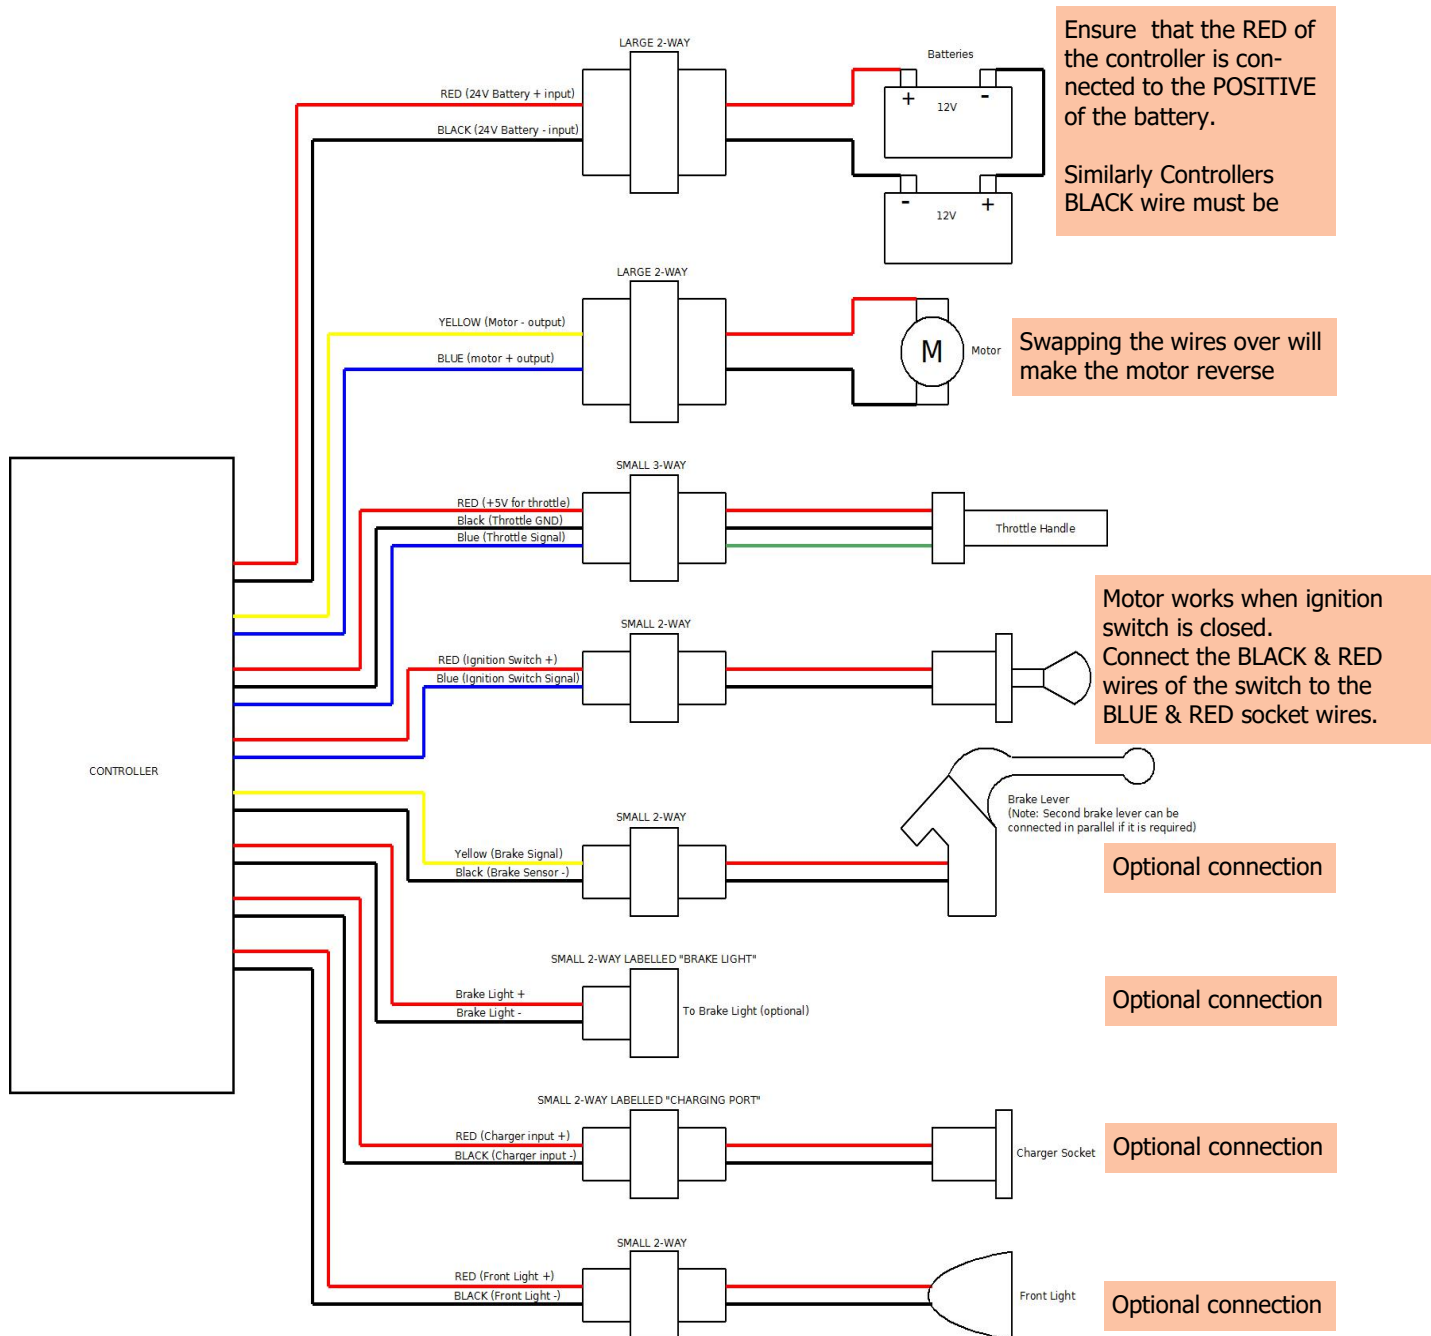

Ensure that the RED of the controller is connected to the POSITIVE of the battery.  
Similarly Controllers BLACK wire must be

Swapping the wires over will make the motor reverse

Motor works when ignition switch is closed. Connect the BLACK & RED wires of the switch to the BLUE & RED socket wires.

Optional connection

Optional connection

Optional connection

Optional connection